

# Kennet

**Frame:** Hardwood glued, screwed and dowelled.

**Arms:** Scrolled arms covered with foam.

**Back:** Hand tensioned elastic webbing covered with foam.

**Seat:** Zig zag springs covered in foam.

**Seat Cushion:** Foam pad inside zipped case.

**Feet:** Solid wooden angled feet in a dark brown or black finish.  
To specify your colour give us a ring on our free phone number 0808 1783211 or email us at [orders@sofasandstuff.com](mailto:orders@sofasandstuff.com).




**Home Access Measurements:** The diagonal measurement of the side of the sofa or chair, as per dimension (I) (see left), must be smaller than the width of the doorway.

The whole journey of your sofa from your front door to the room of choice needs to be taken into account, when considering access. Are there stairs to get round, or other obstacles?

If you have concerns about any aspects of delivering your sofa please feel free to ask for advice, call us on 0808 1783211.

## FITTED COVER

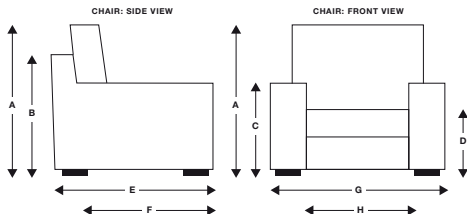

	CHAIR
(A) TOTAL HEIGHT	98 cm
(B) FRAME HEIGHT	98 cm
(C) ARM HEIGHT	62 cm
(D) SEAT HEIGHT	51 cm
(E) TOTAL DEPTH	87 cm
(F) SEAT DEPTH	57 cm
(G) TOTAL WIDTH	82 cm
(H) INTERNAL WIDTH	54 cm
(I) ACCESS DIMENSION	56 cm



**SOFAS & STUFF**

experts in comfort